

6517B

Electrometer/High Resistance Meter



Measures resistances up to $10^{16}\Omega$

1fA–20mA current measurement range

<20 μ V burden voltage on lowest current ranges

200T Ω input impedance

<3fA bias current

Up to 425 rdgs/s

0.75fA p-p noise

Built-in \pm 1kV voltage source

Unique voltage reversal method for high resistance measurements

Optional plug-in scanner cards

Ordering Information

6517B Electrometer/High Resistance Meter

Accessories Supplied

237-ALG-2 Low Noise Triax Cable, 3-slot Triax to Alligator Clips, 2m (6.6 ft)

8607 Safety High Voltage Dual Test Leads

6517-TP Thermocouple Bead Probe

CS-1305 Interlock Connector

Keithley's 5½-digit Model 6517B Electrometer/High Resistance Meter offers accuracy and sensitivity specifications unmatched by any other meter of this type. It also offers a variety of features that simplify measuring high resistances and the resistivity of insulating materials. With reading rates of up to 425 readings/second, the Model 6517B is also significantly faster than competitive electrometers, so it offers a quick, easy way to measure low-level currents.

Exceptional Performance Specifications

The half-rack-sized Model 6517B has a special low current input amplifier with an input bias current of <3fA with just 0.75fA p-p (peak-to-peak) noise and <20 μ V burden voltage on the lowest range. The input impedance for voltage and resistance measurements is 200T Ω for near-

ideal circuit loading. These specifications ensure the accuracy and sensitivity needed for accurate low current and high impedance voltage, resistance, and charge measurements in areas of research such as physics, optics, nanotechnology, and materials science. A built-in \pm 1kV voltage source with sweep capability simplifies performing leakage, breakdown, and resistance testing, as well as volume (Ω -cm) and surface resistivity (Ω /square) measurements on insulating materials.

Wide Measurement Ranges

The Model 6517B offers full autoranging over the full span of ranges on current, resistance, voltage, and charge measurements:

- Current measurements from 1fA to 20mA
- Voltage measurements from 10 μ V to 200V
- Resistance measurements from 50 Ω to $10^{16}\Omega$
- Charge measurements from 10fC to 2 μ C

ACCESSORIES AVAILABLE

CABLES		ADAPTERS	
6517B-ILC-3	Interlock Cable	237-BNC-TRX	Male BNC to 3-Lug Female Triax Adapter
7007-1	Shielded IEEE-488 Cable, 1m (3.2 ft)	237-TRX-NG	Triax Male-Female Adapter with Guard Disconnected
7007-2	Shielded IEEE-488 Cable, 2m (6.5 ft)	237-TRX-T	3-Slot Male Triax to Dual 3-Lug Female Triax Tee Adapter
7009-5	RS-232 Cable	237-TRX-TBC	3-Lug Female Triax Bulkhead Connector (1.1kV rated)
7078-TRX-3	Low Noise Triax Cable, 3-Slot Triax Connectors, 0.9m (3 ft)	7078-TRX-BNC	3-Slot Male Triax to BNC Adapter
7078-TRX-10	Low Noise Triax Cable, 3-Slot Triax Connectors, 3m (10 ft)	7078-TRX-GND	3-Slot Male Triax to BNC Adapter with guard removed
7078-TRX-20	Low Noise Triax Cable, 3-Slot Triax Connectors, 6m (20 ft)	7078-TRX-TBC	3-Lug Female Triax Bulkhead Connector with Cap
8501-1	Trigger Link Cable, 1m (3.3 ft)	SOFTWARE	
8501-2	Trigger Link Cable, 2m (6.6 ft)	6524	High Resistance Measurement Software
8503	Trigger Link Cable to 2 male BNCs, 1m (3.3 ft)	RACK MOUNT KITS	
8607	1kV Source Banana Cables	4288-1	Single Fixed Rack Mounting Kit
PROBES		4288-2	Dual Fixed Rack Mounting Kit
6517-RH	Humidity Probe with Extension Cable	SCANNER CARDS	
6517-TP	Temperature Bead Probe (included with 6517B)	6521	Low Current Scanner Card
TEST FIXTURE		6522	Voltage/Low Current Scanner Card
8009	Resistivity Test Fixture	GPIB INTERFACES	
OTHER		KPCI-488LP	IEEE-488 Interface/Controller for the PCI Bus
CS-1305	Interlock Connector	KPXI-488	IEEE-488 Interface Board for the PXI Bus
		KUSB-488A	IEEE-488 USB-to-GPIB Interface Adapter

1.888.KEITHLEY (U.S. only)

www.keithley.com

KEITHLEY

A GREATER MEASURE OF CONFIDENCE

Simplifies measuring high resistances and the resistivity of insulating materials

LOW LEVEL MEASURE & SOURCE

6517B

Electrometer/High Resistance Meter

Simplifies measuring high resistances and the resistivity of insulating materials

Simple DMM-like Operation

The Model 6517B is designed for easy, DMM-like operation via the front panel, with single-button control of important functions such as resistance measurement. It can also be controlled via a built-in IEEE-488 interface, which makes it possible to program all functions over the bus through a computer controller.

High Accuracy High Resistance Measurements

The Model 6517B offers a number of features and capabilities that help ensure the accuracy of high resistance measurement applications. For example, the built-in voltage source simplifies determining the relationship between an insulator's resistivity and the level of source voltage used. It is well suited for capacitor leakage and insulation resistance measurements, tests of the surface insulation resistance of printed circuit boards, voltage coefficient testing of resistors, and diode leakage characterization.

A test sequence in the Model 6517B incorporates a new voltage reversal method for measuring very high resistances, especially in materials and devices where the inherent background currents in the sample previously made accurate measurements impossible. The optional Model 6524 software package simplifies operating the Model 6517B via a computer controller and makes it easy to optimize the test parameters (delay time, voltage, etc.) for the specific material or device under test. The Model 6517B meter, the software, and a resistivity fixture are available as a combination for specific material or device testing applications. Refer to the Model 65 for more information.

Temperature and Humidity Stamping

Humidity and temperature can influence the resistivity values of materials significantly. To help you make accurate comparisons of readings acquired under varying conditions, the Model 6517B offers a built-in type K thermocouple and an optional Model 6517-RH Relative Humidity Probe. A built-in

data storage buffer allows recording and recalling readings stamped with the time, temperature, and relative humidity at which they were acquired.

Accessories Extend Measurement Capabilities

A variety of optional accessories can be used to extend the Model 6517B's applications and enhance its performance.

Scanner Cards. Two scanner cards are available to simplify scanning multiple signals. Either card can be easily inserted in the option slot of the instrument's back panel. The Model 6521 Scanner Card offers ten channels of low-level current scanning. The Model 6522 Scanner Card provides ten channels of high impedance voltage switching or low current switching.

Test Fixture. The Model 8009 Resistivity Chamber is a guarded test fixture for measuring volume and surface resistivities of sample materials. It has stainless-steel electrodes built to ASTM standards. The fixture's electrode dimensions are pre-programmed into the Model 6517B, so there's no need to calculate those values then enter them manually. This accessory is designed to protect you from contact with potentially hazardous voltages—opening the lid of the chamber automatically turns off the Model 6517B's voltage source.

Applications

The Model 6517B is well suited for low current and high impedance voltage, resistance, and charge measurements in areas of research such as physics, optics, and materials science. Its extremely low voltage burden makes it particularly appropriate for use in solar cell applications, and its built-in voltage source and low current sensitivity make it an excellent solution for high resistance measurements of nanomaterials such as polymer based nanowires. Its high speed and ease of use also make it an excellent choice for quality control, product engineering, and production test applications involving leakage, breakdown, and resistance testing. Volume and surface resistivity measurements on non-conductive materials are particularly enhanced by the Model 6517B's voltage reversal method.


Model 6517B Enhancements

The Model 6517B is an updated version, replacing the earlier Model 6517A, which was introduced in 1996. Software applications created for the Model 6517A using SCPI commands can run without modifications on the Model 6517B. However, the Model 6517B does offer some useful enhancements to the earlier design. Its internal battery-backed memory buffer can now store up to 50,000 readings, allowing users to log test results for longer periods and to store more data associated with those readings. The new model also provides faster reading rates to the internal buffer (up to 425 readings/second) and to external memory via the IEEE bus (up to 400 readings/second). Several connector modifications have been incorporated to address modern connectivity and safety requirements.

SERVICES AVAILABLE

6517B-3Y-EW	1-year factory warranty extended to 3 years from date of shipment
C/6517B-3Y-ISO	3 (ISO-17025 accredited) calibrations within 3 years of purchase*
TRN-LLM-1-C	Course: Making Accurate Low-Level Measurements

*Not available in all countries

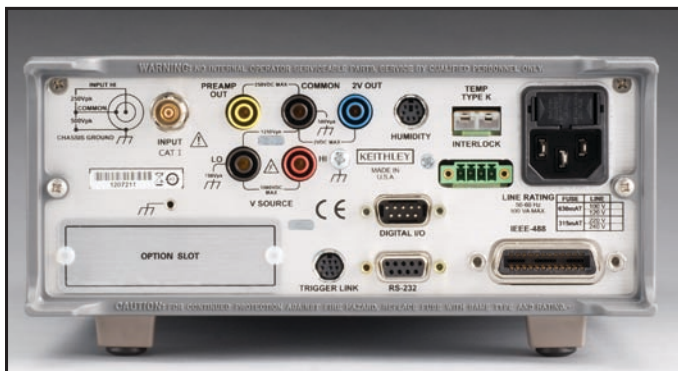

Model 6517B rear panel

1.888.KEITHLEY (U.S. only)

www.keithley.com

KEITHLEY

A GREATER MEASURE OF CONFIDENCE

LOW LEVEL MEASURE & SOURCE

6517B

Electrometer/High Resistance Meter

VOLTS		ACCURACY	TEMPERATURE
5½-DIGIT RANGE	(1 Year) ¹ 18°-28°C RESOLUTION	COEFFICIENT 0°-18°C & 28°-50°C ±(%rdg+counts)	±(%rdg+counts)/°C
2 V	10 μV	0.025 + 4	0.003 + 2
20 V	100 μV	0.025 + 3	0.002 + 1
200 V	1 mV	0.06 + 3	0.002 + 1

NMRR: 2V and 20V ranges >60dB, 200V range >55dB. 50Hz or 60Hz².

CMRR: >120dB at DC, 50Hz or 60Hz.

INPUT IMPEDANCE: >200TΩ in parallel with 20pF, <2pF guarded (1MΩ with zero check on).

SMALL SIGNAL BANDWIDTH AT PREAMP OUTPUT: Typically 100kHz (-3dB).

- When properly zeroed, 5½-digit, 1 PLC (power line cycle), median filter on, digital filter = 10 readings.
- Line sync on.

AMPS		ACCURACY	TEMPERATURE
5½-DIGIT RANGE	(1 Year) ¹ 18°-28°C RESOLUTION	COEFFICIENT 0°-18°C & 28°-50°C ±(%rdg+counts)	±(%rdg+counts)/°C
20 pA	100 aA ²	1 + 30	0.1 + 5
200 pA	1 fA ²	1 + 5	0.1 + 1
2 nA	10 fA	0.2 + 30	0.1 + 2
20 nA	100 fA	0.2 + 5	0.03 + 1
200 nA	1 pA	0.2 + 5	0.03 + 1
2 μA	10 pA	0.1 + 10	0.005 + 2
20 μA	100 pA	0.1 + 5	0.005 + 1
200 μA	1 nA	0.1 + 5	0.005 + 1
2 mA	10 nA	0.1 + 10	0.008 + 2
20 mA	100 nA	0.1 + 5	0.008 + 1

INPUT BIAS CURRENT: <3fA at T_{CAL}. Temperature coefficient = 0.5fA/°C, 20pA range.

INPUT BIAS CURRENT NOISE: <750aA p-p (capped input), 0.1Hz to 10Hz bandwidth, damping on. Digital filter = 40 readings, 20pA range.

INPUT VOLTAGE BURDEN at T_{CAL} ±1°C:

- <20μV on 20pA, 2nA, 20nA, 2μA, and 20μA ranges.
- <100μV on 200pA, 200nA, and 200μA ranges.
- <2mV on 2mA range. <5mV on 20mA range.

TEMPERATURE COEFFICIENT OF INPUT VOLTAGE BURDEN: <10μV/°C on pA, nA, and μA ranges.

PREAMP SETTLING TIME (to 10% of final value) Typical: 0.5sec (damping off) 2.0 sec (damping on) on pA ranges. 15msec on nA ranges damping off, 1msec on μA ranges damping off. 500μsec on mA ranges damping off.

NMRR: >60dB on all ranges at 50Hz or 60Hz².

- When properly zeroed, 5½-digit, 1PLC (power line cycle), median filter on, digital filter = 10 readings.
- aA = 10⁻¹⁸A, fA = 10⁻¹⁵A.
- Line sync on.

COULOMBS		ACCURACY	TEMPERATURE
5½-DIGIT RANGE	(1 Year) ^{1,2} 18°-28°C RESOLUTION	COEFFICIENT 0°-18°C & 28°-50°C ±(%rdg+counts)	±(%rdg+counts)/°C
2 nC	10 fC	0.4 + 5	0.04 + 3
20 nC	100 fC	0.4 + 5	0.04 + 1
200 nC	1 pC	0.4 + 5	0.04 + 1
2 μC	10 pC	0.4 + 5	0.04 + 1

1. Specifications apply immediately after charge acquisition. Add

$$\left(4fA + \frac{|Q_M|}{RC}\right) T_A$$

where T_A = period of time in seconds between the coulombs zero and measurement
Q_M = average charge measured over T_A, and RC = 300,000 typical.

- When properly zeroed, 5½-digit, 1PLC (power line cycle), median filter on, digital filter = 10 readings.

INPUT BIAS CURRENT: <4fA at T_{CAL}. Temperature coefficient = 0.5fA/°C, 2nC range.

OHMS (Normal Method)

RANGE	5½-DIGIT RESOLUTION	ACCURACY ¹ (10-100% Range) 18°-28°C (1 Year) ±(% rdg+counts)	TEMPERATURE COEFFICIENT (10-100% Range) 0°-18°C & 28°-50°C ±(% rdg+counts)	AUTO V SOURCE	AMPS RANGE
2 MΩ	10 Ω	0.125 + 1	0.01 + 1	40 V	200 μA
20 MΩ	100 Ω	0.125 + 1	0.01 + 1	40 V	20 μA
200 MΩ	1 kΩ	0.15 + 1	0.015 + 1	40 V	2 μA
2 GΩ	10 kΩ	0.225 + 1	0.035 + 1	40 V	200 nA
20 GΩ	100 kΩ	0.225 + 1	0.035 + 1	40 V	20 nA
200 GΩ	1 MΩ	0.35 + 1	0.110 + 1	40 V	2 nA
2 TΩ	10 MΩ	0.35 + 1	0.110 + 1	400 V	2 nA
20 TΩ	100 MΩ	1.025 + 1	0.105 + 1	400 V	200 pA
200 TΩ	1 GΩ	1.15 + 1	0.125 + 1	400 V	20 pA

- Specifications are for auto V-source ohms, when properly zeroed, 5½-digit, 1PLC, median filter on, digital filter = 10 readings. If user selectable voltage is required, use manual mode. Manual mode displays resistance (up to 10¹⁸Ω) calculated from measured current. Accuracy is equal to accuracy of V-source plus accuracy of selected Amps range.

PREAMP SETTLING TIME: Add voltage source settling time to preamp settling time in Amps specification. Ranges over 20GΩ require additional settling based on the characteristics of the load.

OHMS (ALTERNATING POLARITY METHOD)

The alternating polarity sequence compensates for the background (offset) currents of the material or device under test. Maximum tolerable offset up to full scale of the current range used.

Using Keithley 8009 fixture

REPEATABILITY: ΔI_{BG} × R/V_{ALT} + 0.1% (1σ) (instrument temperature constant ±1°C).

ACCURACY: (V_{SRC}Err + I_{MEAS}Err × R)/V_{ALT}

where: ΔI_{BG} is a measured, typical background current noise from the sample and fixture.

V_{ALT} is the alternating polarity voltage used.

V_{SRC}Err is the accuracy (in volts) of the voltage source using V_{ALT} as the setting.

I_{MEAS}Err is the accuracy (in amps) of the ammeter using V_{ALT}/R as the reading.

VOLTAGE SOURCE

RANGE	5½-DIGIT RESOLUTION	ACCURACY (1 Year) 18°-28°C ±(% setting + offset)	TEMPERATURE COEFFICIENT 0°-18°C & 28°-50°C ±(% setting+offset)/°C
100 V	5 mV	0.15 + 10 mV	0.005 + 1 mV
1000 V	50 mV	0.15 + 100 mV	0.005 + 10 mV

MAXIMUM OUTPUT CURRENT:

- 100V Range: ±10mA, hardware short circuit protection at <14mA.
- 1000V Range: ±1mA, hardware short circuit protection at <1.4mA.

SETTLING TIME:

- 100V Range: <8ms to rated accuracy.
- 1000V Range: <50ms to rated accuracy.

NOISE (typical):

- 100V Range: <2.6mV rms.
- 1000V Range: <2.9mV rms.

TEMPERATURE (Thermocouple)

THERMOCOUPLE TYPE	RANGE	ACCURACY (1 Year) ¹ 18°-28°C ±(% rdg + °C)
K	-25°C to 150°C	±(0.3% + 1.5°C)

- Excluding probe errors, T_{cal} ± 5°C, 1 PLC integration time.

HUMIDITY

RANGE	ACCURACY (1 Year) ¹ 18°-28°C, ±(% rdg + % RH)
0-100%	±(0.3% + 0.5)

- Humidity probe accuracy must be added. This is ±3% RH for Model 6517-RH, up to 65°C probe environment, not to exceed 85°C.

1.888.KEITHLEY (U.S. only)

www.keithley.com

KEITHLEY



6517B

Electrometer/High Resistance Meter

Model 6517B specifications

IEEE-488 BUS IMPLEMENTATION

IMPLEMENTATION: SCPI (IEEE-488.2, SCPI-1999.0).
TRIGGER TO READING DONE: 150ms typical, with external trigger.
RS-232 IMPLEMENTATION: Supports: SCPI 1991.0.
Baud Rates: 300, 600, 1200, 2400, 4800, 9600, 19.2k, 38.4k, 57.6k, and 115.2k.
FLOW CONTROL: None, Xon/Xoff.
CONNECTOR: DB-9 TXD/RXD/GND.

GENERAL

DISPLAY: 6½-digit vacuum fluorescent multiline.
OVERRRANGE INDICATION: Display reads "OVERFLOW" for readings >105% of range. The display reads "OUT OF LIMIT" for excessive overrange conditions.
RANGING: Automatic or manual.
CONVERSION TIME: Selectable 0.01PLC to 10PLC.
MAXIMUM INPUT: 250V peak, DC to 60Hz sine wave; 10sec per minute maximum on mA ranges.
MAXIMUM COMMON MODE VOLTAGE (DC to 60Hz sine wave): Electrometer, 500V peak; V Source, 750V peak.
ISOLATION (Meter COMMON to chassis): >10¹⁰Ω, <500pF.
INPUT CONNECTOR: Three lug triaxial on rear panel.
2V ANALOG OUTPUT: 2V for full range input. Non-inverting in Volts mode, inverting when measuring Amps, Ohms, or Coulombs. Output impedance 10kΩ.
PREAMP OUTPUT: Provides a guard output for Volts measurements. Can be used as an inverting output or with external feedback in Amps and Coulombs modes.
EXTERNAL TRIGGER: TTL compatible External Trigger and Electrometer Complete.
GUARD: Switchable voltage guard available.
DIGITAL I/O AND TRIGGER LINE: Available, see manual for usage.
EMC: Conforms to European Union Directive 89/336/EEC, EN 61326-1.

SAFETY: Conforms to European Union Directive 73/23/EEC, EN 61010-1.
READING STORAGE: 50,000.
READING RATES:
To Internal Buffer: 425 readings/second¹.
To IEEE-488 Bus: 400 readings/second^{1, 2}.
Bus Transfer: 3300 readings/second².
 1. 0.01PLC, digital filters off, front panel off, temperature + RH off, Line Sync off.
 2. Binary transfer mode.
DIGITAL FILTER: Median and averaging.
ENVIRONMENT: Operating: 0°–50°C, relative humidity 70% non-condensing, up to 35°C. **Storage:** –25° to +65°C.
ALTITUDE: Maximum 2000 meters above sea level per EN 61010-1.
WARM-UP: 1 hour to rated accuracy (see manual for recommended procedure).
POWER: User selectable 100, 120, 220, 240VAC ±10%; 50/60Hz, 100VA max.
PHYSICAL: Case Dimensions: 90mm high × 214mm wide × 369mm deep (3½ in. × 8½ in. × 14½ in.).
Working Dimensions: From front of case to rear including power cord and IEEE-488 connector: 15.5 inches.
Net Weight: 5.4kg (11.8 lbs.).
Shipping Weight: 6.9kg (15.11 lbs.).



Servicios de Calibración y Metrología, S.A. de C.V.

Servicios de Calibración y Metrología, S.A. de C.V.
 Av. de la esperanza #916, Col. La Hacienda Apodaca, N.L. 66636
 Tel: (81) 11600085, (81)86614542, email: webmaster@scmmx.com

C E

KEITHLEY INSTRUMENTS, INC. ■ 28775 AURORA ROAD ■ CLEVELAND, OHIO 44139-1891 ■ 440-248-0400 ■ Fax: 440-248-6168 ■ 1-888-KEITHLEY ■ www.keithley.com

BELGIUM

Sint-Pieters-Leeuw
 Ph: 02-3630040
 Fax: 02-3630064
 info@keithley.nl
 www.keithley.nl

CHINA

Beijing
 Ph: 8610-82255010
 Fax: 8610-82255018
 china@keithley.com
 www.keithley.com.cn

FINLAND

Espoo
 Ph: 09-88171661
 Fax: 09-88171662
 finland@keithley.com
 www.keithley.com

FRANCE

Saint-Aubin
 Ph: 01-64532020
 Fax: 01-60117726
 info@keithley.fr
 www.keithley.fr

GERMANY

Germering
 Ph: 089-84930740
 Fax: 089-84930734
 info@keithley.de
 www.keithley.de

INDIA

Bangalore
 Ph: 080-26771071, -72, -73
 Fax: 080-26771076
 info@keithley.com
 support_india@keithley.com
 www.keithley.com

ITALY

Peschiera Borromeo (Mi)
 Ph: 02-5538421
 Fax: 02-55384228
 info@keithley.it
 www.keithley.it

JAPAN

Tokyo
 Ph: 81-3-5733-7555
 Fax: 81-3-5733-7556
 info.jp@keithley.com
 www.keithley.jp

KOREA

Seoul
 Ph: 82-2-574-7778
 Fax: 82-2-574-7838
 keithley@keithley.co.kr
 www.keithley.co.kr

MALAYSIA

Penang
 Ph: 60-4-656-2592
 Fax: 60-4-656-3794
 chan_patrick@keithley.com
 www.keithley.com

NETHERLANDS

Gorinchem
 Ph: 0183-635333
 Fax: 0183-630821
 info@keithley.nl
 www.keithley.nl

SINGAPORE

Singapore
 Ph: 65-6747-9077
 Fax: 65-6747-2991
 koh_william@keithley.com
 www.keithley.com.sg

SWEDEN

Solna
 Ph: 08-50904600
 Fax: 08-6552610
 sweden@keithley.com
 www.keithley.com

SWITZERLAND

Zürich
 Ph: 044-8219444
 Fax: 044-8203081
 info@keithley.ch
 www.keithley.ch

TAIWAN

Hsinchu
 Ph: 886-3-572-9077
 Fax: 886-3-572-9031
 info.kei@keithley.com.tw
 www.keithley.com.tw

UNITED KINGDOM

Theale
 Ph: 0118-9297500
 Fax: 0118-9297519
 info@keithley.co.uk
 www.keithley.co.uk

LOW LEVEL MEASURE & SOURCE