


# Digital Storage Oscilloscope

## TBS2000B Series Datasheet

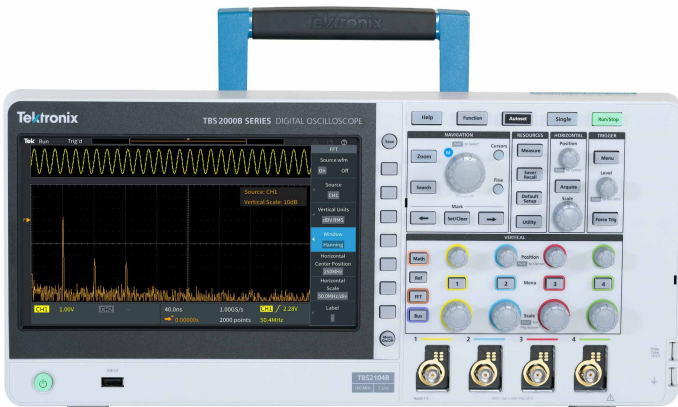

The TBS2000B Series of Oscilloscopes with a 9-inch WVGA display, 5 million point record length and 2 GS/s sample rate, capture and display significantly more signal to help you debug and validate the designs faster. Easily and confidently analyze your signals with new on-waveform cursor readouts and 32 automated measurements, each with informative tips. The TekVPI® probe interface supports traditional passive BNC probes, but also enables wide application coverage with the latest active voltage probes and current probes.

### Key performance specifications

- 2 and 4 analog channel models

- 200 MHz, 100 MHz, and 70 MHz bandwidth models up to 2 GS/s sampling rate
- 5 M record length on all channels
- 5 year warranty

### Key features

- 9-inch WVGA color display with 15 horizontal grids shows 50% more signal
- TekVPI probe interface supports active, differential, and current probes with automatic scaling and units
- New front-end design enables more accurate measurements
- 32 automated measurements, and FFT function for quick waveform analysis
- Search and Mark features for easy identification of events that occur in the acquired waveform
- HelpEverywhere® provides helpful on-screen tips for new users
- Built-in Scope Intro handbook provides operating instructions and oscilloscope fundamentals
- The instrument user interface and the front panel overlay is translated into 10 languages


### Connectivity

- USB 2.0 host port on the front panel for quick and easy data storage
- USB 2.0 device port on rear panel for easy connection to a PC
- 10/100BASE-T Ethernet port for remote control over LAN
- Wi-Fi interface provides wireless communications capability support <sup>1</sup>

### Education

- Courseware function presents lab exercise guidance on the display
- Autoset, Cursors, and Automated measurements can be disabled to help educators to teach basic concepts to students

<sup>1</sup> A Wi-Fi adapter is available in some countries from Tektronix distributors as an accessory, model TEK-USB-WIFI. See Ordering Information for details.

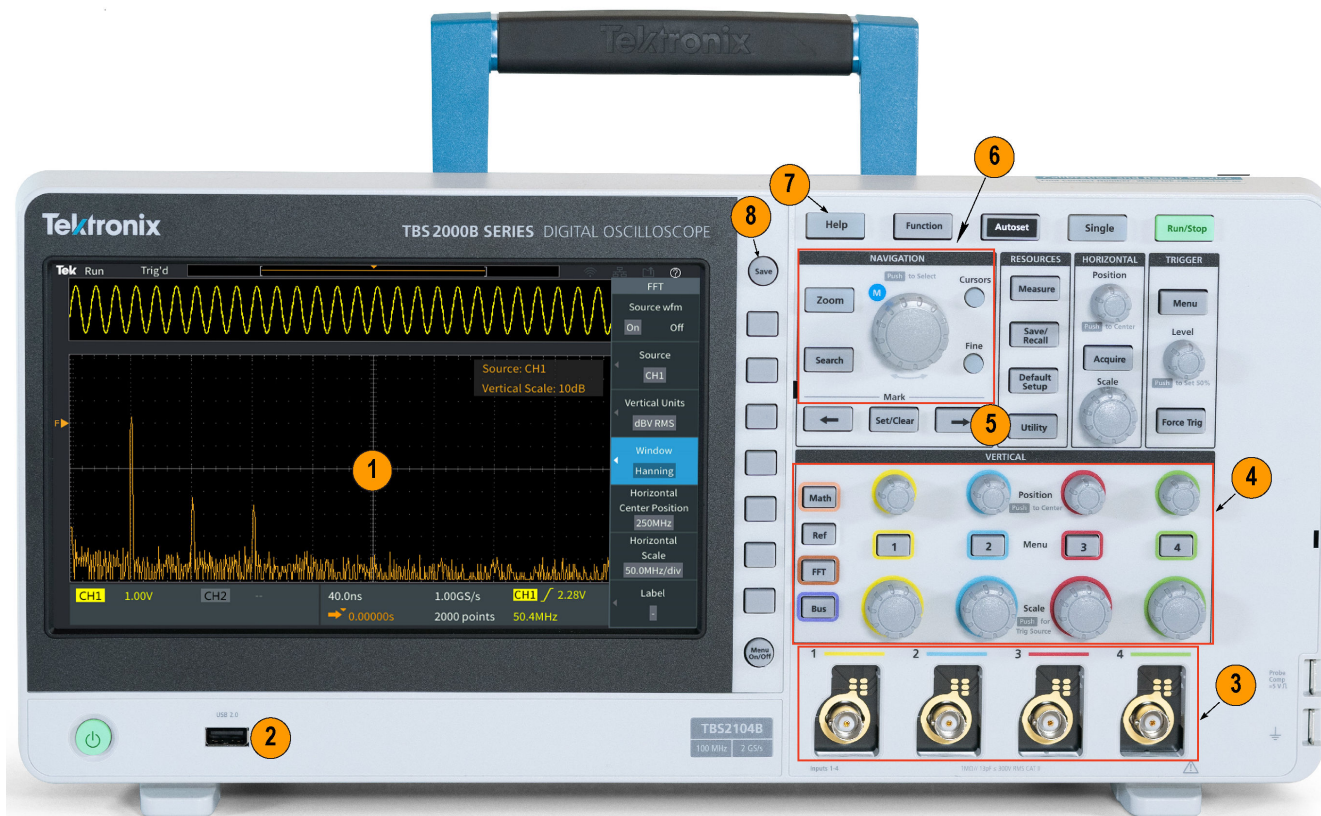

TBS2000B front panel

Image reference	Description
1	Large 9" Display
2	USB port for save / recall
3	TekVPI Probe Interface, for use with passive and active probes
4	Dedicated control knobs per channel

Image reference	Description
5	Search for event for interest
6	Multi purpose knob for navigation, zoom and cursors
7	Help everywhere
8	One-button save




TBS2000B rear panel

Image reference	Description
1	Aux Out signal
2	Ethernet for remote connectivity
3	USB port for WiFi connectivity
4	USB TMC for remote connectivity


## Designed to make your work easier

The TBS2000B Series is designed for easy operation and quick hands-on learning. Dedicated controls provide quick access to important settings, so you can evaluate signals faster. With the TBS2000B you get 10 vertical divisions and 15 horizontal divisions, so you can see more of your signal. The large display also offers more room for measurement results and menu information.

The Zoom function lets you quickly pan through the record and zoom in to see signal details. The new on screen cursors overlay the cursor measurements on the screen making them intuitive to read and understand.

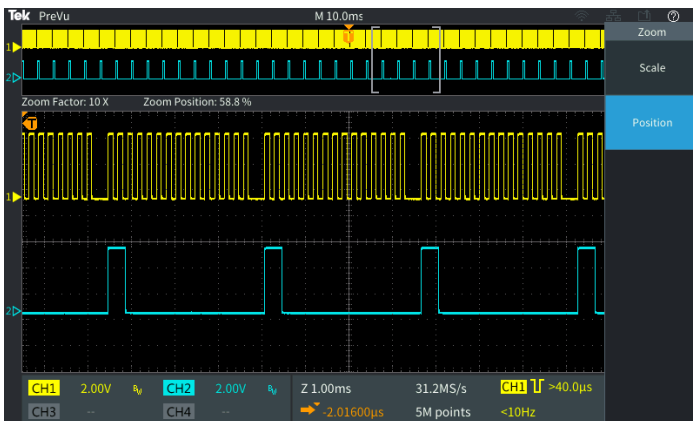

In Zoom mode, an overview of the entire record is shown in the upper part of the display and the lower part displays the detailed Zoomed view.

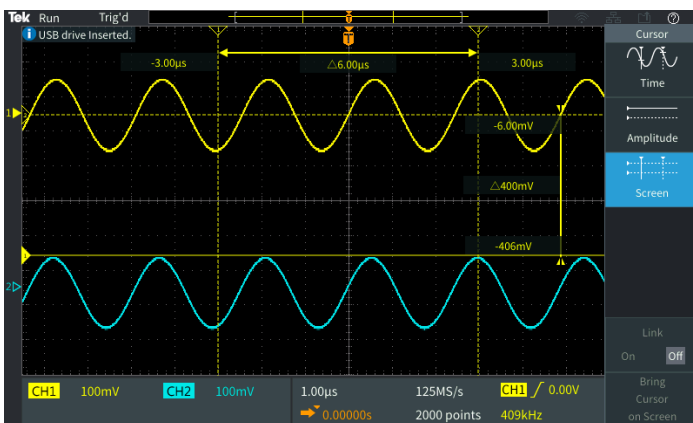

The cursor readouts are presented on the waveform display. Cursors can be used to measure time and amplitude.


## Versatile triggering and acquisition modes

The trigger system is designed for troubleshooting today's mixed signal designs. Beyond a basic edge trigger, it also includes pulse width and runt triggering, which are especially useful for troubleshooting digital sections of your designs. Pulse width triggering is perfect for hunting narrow glitches or timeout conditions. Runt trigger is designed to capture signals that are shorter in amplitude than expected.

The Instrument offers several acquisition modes. The default acquisition mode is Sample Mode which works well for most applications. The Peak Detect Mode is useful for hunting spikes, and Average Mode can help reduce noise on repetitive signals.

## Quickly search for events of interest

The search button enables you to quickly setup a search criteria based on trigger settings. All occurrences of the event of interest with the acquisition are highlighted with search marks. Easily navigate to each instance of occurrence with dedicated navigation buttons for closer inspection and analysis.

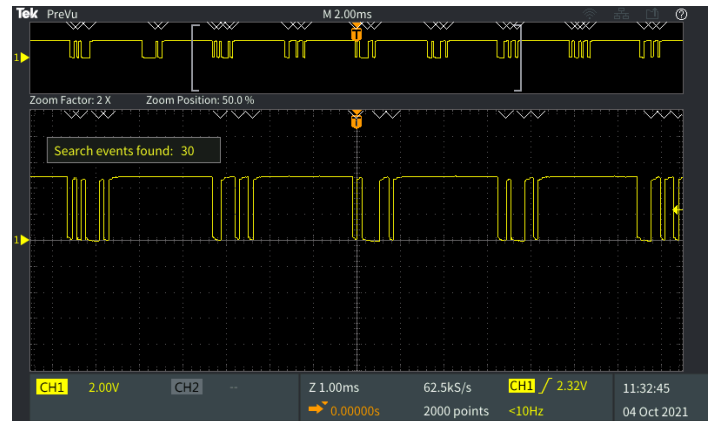


Search and mark

Search through events of interest and mark then through the entire acquisition.

## Automated measurements are easier than ever


A comprehensive set of automated measurements enable fast and convenient testing of a wide variety of signal conditions for different applications.

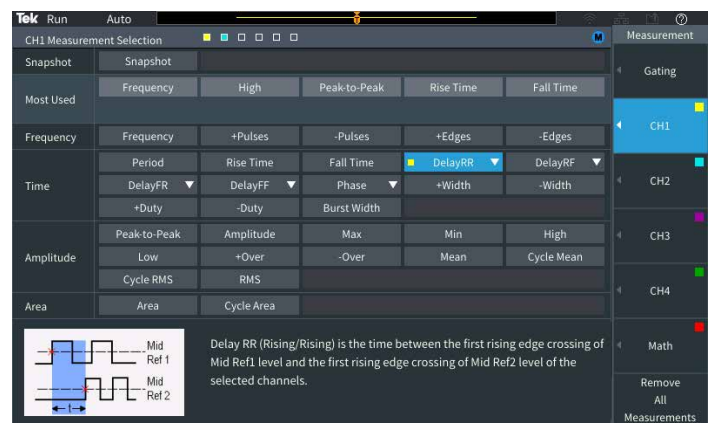

Measurements are all listed and selected on a single screen.

The measurements are grouped into four categories: Frequency, time, amplitude, and area. All the measurements are displayed on a single measurement selection screen making it easy to choose from 32 automated measurements, no more hunting through various menus.

Measurements are color coded by the source, and are presented on a transparent background, so waveforms are not obscured by the readouts. The HelpEverywhere® system provides help texts with graphics to explain how a measurement is performed, making it easier for new users to know which measurement to use and to interpret the results.

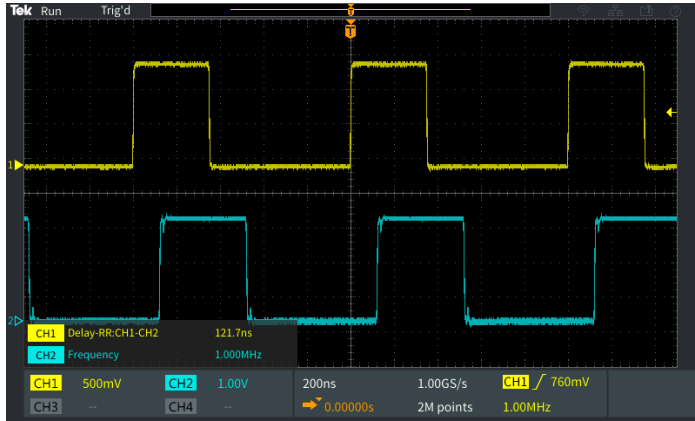

Measurements are transparent so waveforms are not obscured.

### FFT function

You can understand the frequency content of your signals with the FFT function by pressing the dedicated front-panel FFT button. Display only the FFT, or turn on the source waveform display to see both the frequency and the time domain waveform. A transparent readout shows important settings without blocking the FFT display.



The time domain source waveform can be displayed above the FFT frequency spectrum.

### TekVPI® Interface and active probe support

The TekVPI probe interface sets the standard for ease of use in probing. With this interface the TBS2000B Series Oscilloscope supports a wide range of the latest voltage and current probes, providing coverage for many applications. These probes are powered by and communicate with the TBS2000B through the VPI interface. Scale factors and status information, such as error conditions, are sent to the instrument for processing and display. This saves you from having to

manually set scale factors, calculate offsets, or the need to degauss your current probes.

The new front end design with higher 2GS/s sample rate offers lower noise and higher effective bits enabling more accurate measurements.



TekVPI probes communicate scale settings, ranges, and status to the TBS2000B.

### First in its class with wireless communications

On the rear of the instrument, you will find several communications ports. The USB device port or LAN port can be used to control the instrument using the fully-documented command set.




Wi-Fi adapters are configured through integrated setup menus and support seamless wireless communications

The TBS2000B is the first oscilloscope in its class to support wireless communication. Plug a compatible Wi-Fi dongle into the USB host port and setup the interface for Wi-Fi from the front panel.

### Built-in tips for faster setup


HelpEverywhere® is a unique feature on the TBS2000B. It shows instant help information as you navigate through key menus. The tips include measurement information, application tips, and general guidance in the form of text and graphics. You can selectively turn tips on and off from the HelpEverywhere® menu.

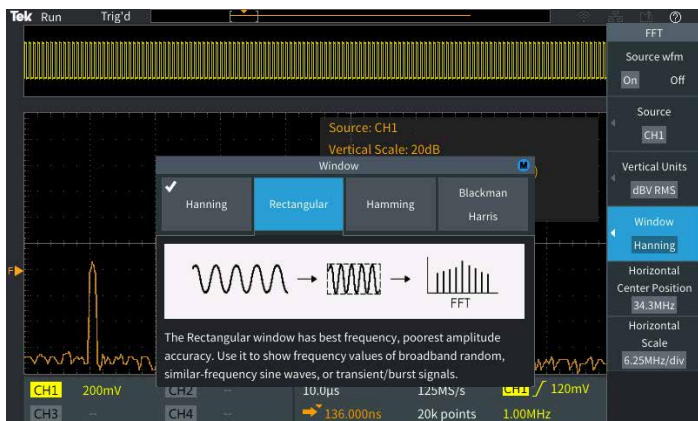

HelpEverywhere® tips explain important settings.


### Innovative new education solutions

The TBS2000B offers new ways to enable educators to devote more time to teaching circuit concepts instead of lab setup and management.

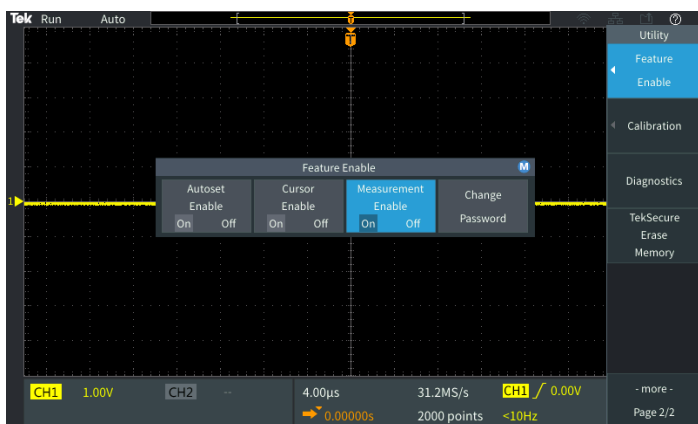

Education features

Educators can disable Autoset, Cursors, and automated measurements on the instruments so that they can teach the students on the basic concepts and help them understand how to use the instrument horizontal and vertical controls to get the waveform display, use the graticule to measure time and voltage and manually plot / calculate the signal characteristics.

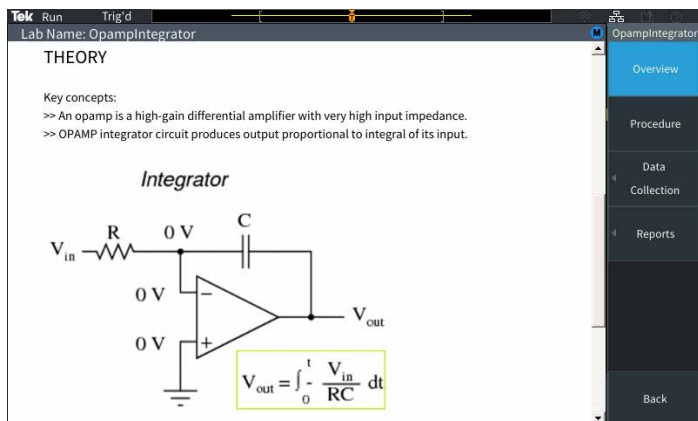



The Courseware function allows students to see lab information on the instrument display.

The integrated Courseware function allows professors to load lab exercises on the instrument to give students guidance at each station and provides a structured framework into which students can capture data to incorporate into their reports. Over 100 sample lab exercises are available for download from the [www.tek.com/courseware](http://www.tek.com/courseware).



## On-screen scope fundamentals


Scope Intro handbook is embedded into the TBS2000B help system. Pressing the front panel Function button gives you access to information on oscilloscope basic operations, as well as an overview of the TBS2000B.

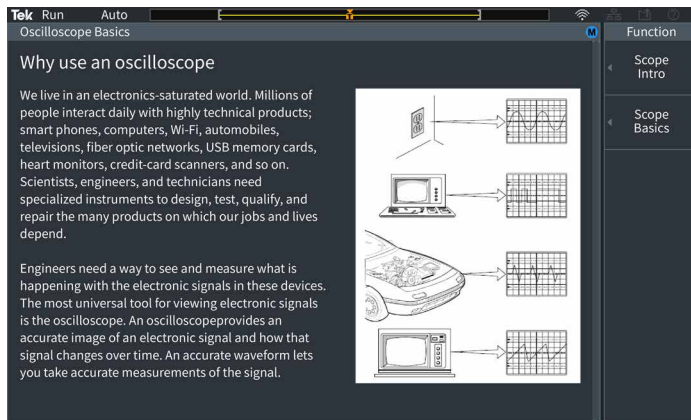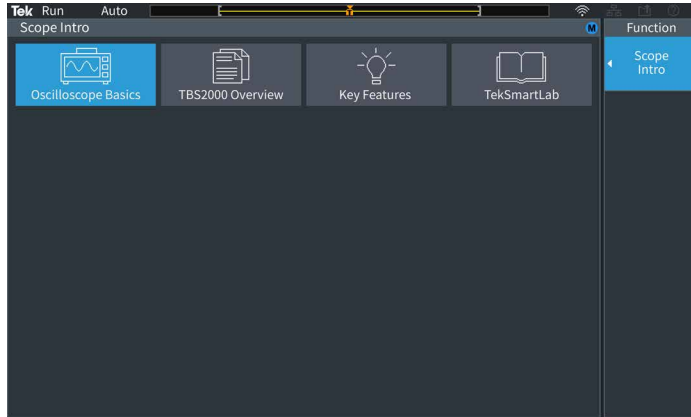

Scope Intro covers basic oscilloscope and TBS2000B usage

## TekScope

TekScope software expands the capabilities of your instrument by enabling you to easily transfer data directly from your oscilloscope to your PC for offline analysis. With the remote analysis for bench oscilloscopes package, you can run protocol decode on the most common buses (I2C, SPI, CAN, CAN-FD, LIN, and UART), advanced analysis capabilities with unlimited measurement, trends, histograms, search and mark as well as offline waveform analysis all in a user environment that is very similar to our high performance instruments.

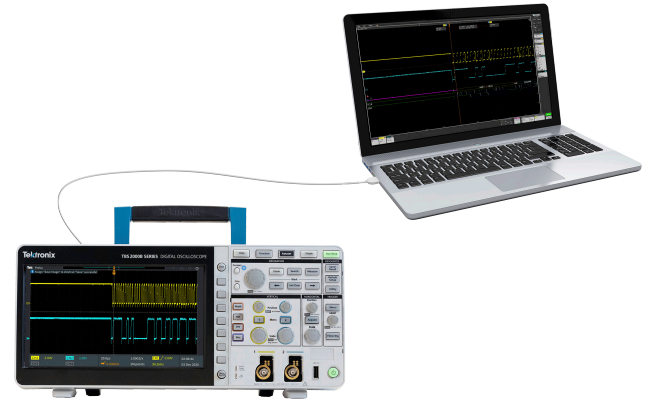

Waveform analysis using TekScope on a PC

## TekBench


TekBench™ is PC software that controls Tektronix oscilloscopes and arbitrary function generators. It offers intuitive instrument control, automated measurement data logging, automated frequency response measurements, and easy waveform exporting with required format to eliminate extra time and effort. It allow users to focus on their experiment rather than learning the instrument



TekBench

## PC connectivity


Easily capture, save, and analyze measurement results by connecting to your PC to the USB device port on the rear of the instrument and using the OpenChoice® PC Communications Software available on the Tektronix website. Simply pull screen images and waveform data into the stand-alone desktop application or directly into Microsoft Word and Excel.

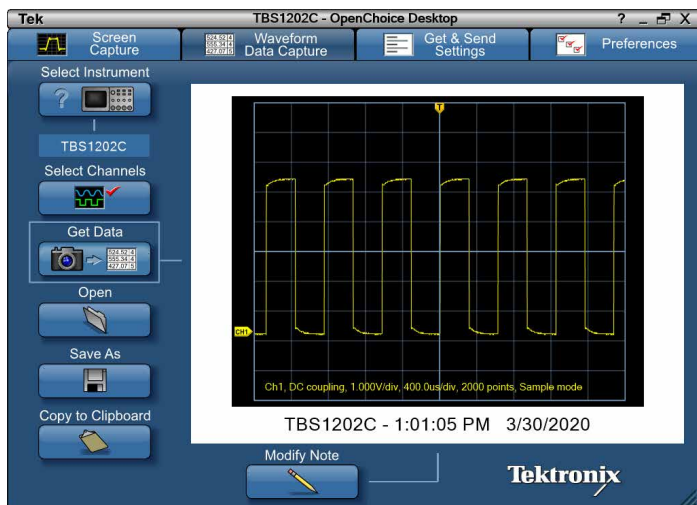

OpenChoice desktop

## Kickstart

Kickstart software offers bench instrument control, automated data, and measurement logging capability of multiple instruments on a bench. The collected data can be charted to get further insights or exported in multiple formats for further analysis. It supports Oscilloscopes, Digital Multi Meters (DMM), Power supplies, and Source Measure Units (SMU).

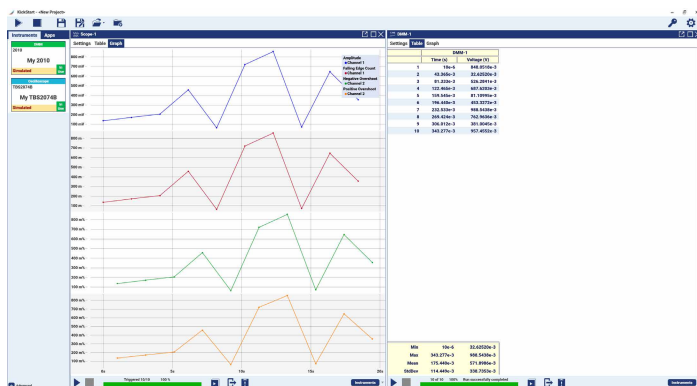

Control multiple instruments and perform data logging with Kickstart

## Performance you can count on

Tektronix has industry-leading service and support, and every TBS2000B Series Oscilloscope is backed with a standard 5-year warranty.



## Specifications

All specifications are guaranteed unless noted otherwise. All specifications apply to all models unless noted otherwise.

### Model overview

Models	TBS2072B	TBS2074B	TBS2102B	TBS2104B	TBS2202B	TBS2204B
Analog Channels	2	4	2	4	2	4
Bandwidth	70 MHz	70 MHz	100 MHz	100 MHz	200 MHz	200 MHz
Max Sample Rate	2 GS/s - Half Channel 1 GS/s - All Channels	2 GS/s - Half Channel 1 GS/s - All Channels	2 GS/s - Half Channel 1 GS/s - All Channels	2 GS/s - Half Channel 1 GS/s - All Channels	2 GS/s - Half Channel 1 GS/s - All Channels	2 GS/s - Half Channel 1 GS/s - All Channels
Record length	5 M points	5 M points	5 M points	5 M points	5 M points	5 M points

### Vertical system analog channels

Hardware bandwidth limits 20 MHz

Input coupling DC or AC

Input impedance 1 M $\Omega$   $\pm$  1 %, 13 pF  $\pm$  1.5 pF

Input sensitivity range 1mV/div to 10 V/div

Vertical resolution 8 bits

Maximum input voltage, 1 M $\Omega$  300 VRMS, Installation Category II; with peaks  $\leq$   $\pm$ 450 V

#### Acquisition modes

<b>Sample</b>	Acquire sampled values.
<b>Peak Detect</b>	Captures glitches as narrow as 3.5 ns at all sweep speeds.
<b>Average</b>	From 2 to 512 waveforms included in average.
<b>Hi-Res</b>	Averages multiple sample of one acquisition interval into one waveform point.
<b>Roll</b>	Scrolls waveforms right to left across the screen at sweep speeds slower than or equal to 40 ms/div.

#### Math modes

<b>All units:</b>	Ch 1 - Ch 2
	Ch 2 - Ch 1
	Ch 1 + Ch 2
	Ch 1 X Ch 2
	FFT
<b>4 channel units:</b>	Ch 3 - Ch 4
	Ch 3 + Ch 4
	Ch 4 - Ch 3
	Ch 3 X Ch 4

DC balance  $\pm (1 \text{ mV} + 0.1 \text{ div})$

DC gain accuracy, typical  $\pm 2\%$  10 V/div through 5 mV/div  
 $\pm 3\%$  1 mV/div and 2 mV/div

**DC voltage measurement accuracy average mode**

**Average of > 16 waveforms**  $\pm((\text{DC Gain Accuracy}) \times |\text{reading} - (\text{offset} - \text{position})| + \text{Offset Accuracy} + 0.11 \text{ div} + 1 \text{ mV})$

**Delta Volts between any two averages of  $\geq 16$  waveforms acquired with the same oscilloscope setup and ambient conditions**  $\pm(\text{DC Gain Accuracy} \times |\text{reading}| + 0.08 \text{ div} + 1.4 \text{ mV})$

Vertical position range  $\pm 5$  divisions

**Vertical offset ranges**

Volts/Div setting	1 M $\Omega$ , Input
1 mV/Div to 50 mV/Div	$\pm 1 \text{ V}$
51 mV/div to 505 mV/div	$\pm 10 \text{ V}$
510 mV/div to 10 V/div	$\pm 100 \text{ V}$

**Analog bandwidth, DC coupled**

**200 MHz models:** DC to >200 MHz

**100 MHz models:** DC to  $\geq 100$  MHz

**70 MHz models:** DC to  $\geq 70$  MHz

**Common mode rejection ratio (CMRR), typical** 100:1 at 60 Hz, reducing to 10:1 with 50 MHz sine wave with equal Volts/div and coupling settings on each channel.

**Channel-to-channel isolation**

TBS2072B, TBS2074B	TBS2102B, TBS2104B	TBS2202B, TBS2204B
$\geq 100:1$ at $\leq 70$ MHz	$\geq 100:1$ at $\leq 100$ MHz	$\geq 100:1$ at $\leq 200$ MHz

**Horizontal system analog channels**

Maximum duration of time captured 5 ms  
at highest sample rate (all channels)

**Time base range** TBS220xB, TBS207xB, TBS210xB: 1 ns/div to 100 sec/div  
**Seconds division range** TBS207xB, TBS210xB, TBS220xB: 1 ns/div to 100 sec/div in a 1-2-4 sequence

**Time-base delay time range** -15 divisions to 5000 s

**Deskew range** ±100 ns

**Time base accuracy** ±25 ppm over any ≥1 ms interval

### Trigger system

**Trigger modes** Auto, Normal, and Single

**Trigger holdoff range** 20 ns to 8 s

#### Trigger types

- Edge** Positive or negative slope on any channel. Coupling includes DC, HF reject, LF reject, and noise reject.
- Pulse width** Trigger on width of positive or negative pulses that are >, <, =, or ≠ a specified period of time.
- Runt** Trigger on a pulse that crosses one threshold but fails to cross a second threshold before crossing the first again.

**Trigger coupling analog channels** DC, Noise Reject, High Freq Reject, Low Freq Reject.

**Sensitivity, edge-type trigger, DC coupled**

Trigger Source	Sensitivity
Analog inputs	0.4 division from DC to 50 MHz
	0.6 divisions >50 MHz to 100 MHz
	0.8 divisions >100 MHz to 200 MHz

**Trigger level ranges** Input channels: ± 4.90 divisions from center screen

### Data storage

**Nonvolatile memory retention time, typical** No time limit for Front Panel Settings, saved waveforms, setups, and calibration constants.

**Real-Time clock** A programmable clock providing time in years, months, days, hours, minutes, and seconds.

### Waveform measurements

**Cursors** Time, amplitude, and screen.

**Automated measurements**

32, of which up to six can be displayed on-screen at any one time. Measurements include: Period, Frequency, Rise Time, Fall Time, Positive Duty Cycle, Negative Duty Cycle, Positive Pulse Width, Negative Pulse Width, Burst Width, Phase, Positive Overshoot, Negative Overshoot, Peak to Peak, Amplitude, High, Low, Max, Min, Mean, Cycle Mean, RMS, Cycle RMS, Positive Pulse Count, Negative Pulse Count, Rising Edge Count, Falling Edge Count, Area, Cycle Area, Delay FR, Delay FF, Delay FR, and Delay RR.

**Gating**

Isolate the specific occurrence within an acquisition to take measurements on, using either the screen, between waveform cursors or full record length.

**Waveform math**

**Arithmetic**

Add, subtract, and multiply waveforms.

**FFT**

Spectral magnitude. Set FFT Vertical Scale to Linear RMS or dBV RMS, and FFT Window to Rectangular, Hamming, Hanning, or Blackman-Harris.

**Remote control software**

**Web page**

Built-in web page enables remote control of horizontal and vertical scale, trigger settings, and measurements. Allows waveform and image save to USB flash drive.

**Display system**

**Display type**

9 inch (228 mm) wide format liquid crystal TFT color display.

**Display resolution**

800 horizontal by 480 vertical displayed pixels (WVGA).

**Waveform styles**

Vectors, Variable Persistence, and Infinite Persistence.

**Graticules**

Grid, None.

**Format**

YT and XY.

**Input output ports**

**USB 2.0 high-speed host port**

Supports USB mass storage devices, Wi-Fi dongle, One port available on rear panel and one on front panel.

**USB 2.0 high-speed device port**

**Device port**

Rear-panel connector allows for communication/control of oscilloscope through USBTMC or GPIB with a TEK-USB-488.

**Compatible USB-WIFI dongles**

NETGEAR WNA1000M, WNA3100M, D-LINK DWA-131, TP-LINK TL-WN823N

**LAN port (Ethernet)**

RJ-45 connector, supports 10/100BASE-T

**Kensington-style lock**

Rear-panel security slot connects to standard Kensington-style lock.

---

## Power source

**Power source voltage** 100 to 240 V<sub>AC</sub> RMS ±10%

**Power source frequency** 47 Hz to 63 Hz (100 to 240 V)  
360 Hz to 440 Hz (100 to 132 V)

**Power consumption** 80 W maximum

---

## Physical characteristics

### Dimensions

**TBS2xx2B:** Height: 174.9 mm (6.89 in)  
Width: 372.4 mm (14.66 in)  
Depth: 103.3 mm (4.07 in)

**TBS2xx4B:** Height: 201.5mm (7.93 in)  
Width: 412.8 mm (16.25 in)  
Depth: 128.1 mm (5.04 in)

---

### Weight

**TBS2xx2B:** 2.62 kg (5.8 lbs.), stand-alone instrument.  
5.1 kg (11.2 lbs.), when packaged for domestic shipment.

**TBS2xx4B:** 4.17 kg (9.2 lbs.), stand-alone instrument.  
7 kg (15.4 lbs.), when packaged for domestic shipment.

---

**Cooling clearance** 50 mm (2 in) required on left side and rear of instrument.

---

## EMC, Environment, and Safety

### Temperature

**Operating** 0 °C to +50 °C (+32 °F to 122 °F)

**Nonoperating** -40 °C to +71 °C, (-40 °F to 160 °F)

---

### Humidity

**Operating** 5% to 95% relative humidity (% RH) at up to +30° C  
5% to 60% RH above +30° C up to +50° C non-condensing

**Nonoperating** 5% to 95% RH (Relative Humidity) at up to +30° C  
5% to 60% RH above +30° C up to +60° C non-condensing

---

### Altitude

**Operating** Up to 3,000 meters (9,842 feet).

---



**Non-Operating** Up to 12,000 meters (39,370 feet).  
Altitude is limited by possible damage to LCD at higher altitudes. This damage is independent of operation.

---

**Regulatory**

**Electromagnetic compatibility** EC Council Directive 2014/30/EU

**Safety** UL61010-1, UL61010-2-030, CAN/CSA-C22.2 No. 61010.1, CAN/CSA-C22.2 No. 61010-2:030; complies with the Low Voltage Directive 2014/35/EU for Product Safety

---

## Ordering information

### Models

Product	Supported instruments
TBS2072B	70 MHz bandwidth, 2 GS/s sample rate, 2-channel digital storage oscilloscope, 5 Mpts record length, 5 year warranty. Certificate of Calibration Standard.
TBS2074B	70 MHz bandwidth, 2 GS/s sample rate, 4-channel digital storage oscilloscope, 5 Mpts record length, 5 year warranty. Certificate of Calibration Standard.
TBS2102B	100 MHz bandwidth, 2 GS/s sample rate, 2-channel digital storage oscilloscope, 5 Mpts record length, 5 year warranty. Certificate of Calibration Standard.
TBS2104B	100 MHz bandwidth, 2 GS/s sample rate, 4-channel digital storage oscilloscope, 5 Mpts record length, 5 year warranty. Certificate of Calibration Standard.
TBS2202B	200 MHz bandwidth, 2 GS/s sample rate, 2-channel digital storage oscilloscope, 5 Mpts record length, 5 year warranty. Certificate of Calibration Standard.
TBS2204B	200 MHz bandwidth, 2 GS/s sample rate, 4-channel digital storage oscilloscope, 5 Mpts record length, 5 year warranty. Certificate of Calibration Standard.

### Bandwidth upgrade options

Options	Supported instruments
SUP2-BW7T102	Upgrade 70 MHz to 100 MHz on 2-channel models of TBS2000B Series oscilloscopes
SUP2-BW7T104	Upgrade 70 MHz to 100 MHz on 4-channel models of TBS2000B Series oscilloscopes
SUP2-BW7T202	Upgrade 70 MHz to 200 MHz on 2-channel models of TBS2000B Series oscilloscopes
SUP2-BW7T204	Upgrade 70 MHz to 200 MHz on 4-channel models of TBS2000B Series oscilloscopes
SUP2-BW10T202	Upgrade 100 MHz to 200 MHz on 2-channel models of TBS2000B Series oscilloscopes
SUP2-BW10T204	Upgrade 100 MHz to 200 MHz on 4-channel models of TBS2000B Series oscilloscopes

### Standard accessories

#### Probes

<b>TPP0200</b>	200 MHz, 10x passive probe (one per analog channel) 200 MHz models
<b>TPP0100</b>	100 MHz, 10x passive probe (one per analog channel) for 70 MHz and 100 MHz models

#### Accessories

<b>071-3635-xx</b>	Compliance and Safety Instructions
<b>077-1149-xx</b>	Programmer manual, available in <a href="http://www.tek.com">HTTP://WWW.TEK.COM</a>
-	Power cord
-	Calibration certificate documenting traceability to National Metrology Institute(s) and ISO9001 quality system registration

#### Warranty

Five-year warranty covering all parts and labor, excluding probes.

### Recommended Probes

Tektronix offers over 100 different probes to meet your application needs. For a comprehensive listing of available probes, please visit [www.tek.com/probe-selector](http://www.tek.com/probe-selector).

Accessory	Description
P5100A	2.5 kV, 500 MHz, 100X high-voltage passive probe
TDP0500	500 MHz TekVPI ® differential voltage probe with $\pm 42$ V differential input voltage
THDP0200	$\pm 1.5$ kV 200 MHz high-voltage differential probe
THDP0100	$\pm 6$ kV 100 MHz high-voltage differential probe
TMDP0200	$\pm 750$ V, 200 MHz TekVPI ® high-voltage differential probe
TAP1500	1.5 GHz TekVPI ® active voltage probe
TCP0020	50 MHz TekVPI ® 20 Ampere AC/DC current probe
TCP0030A	120 MHz TekVPI ® 30 Ampere AC/DC current probe
TCP0150	20 MHz TekVPI ® 150 Ampere AC/DC current probe
TCP2020	50 MHz BNC 20 Ampere AC/DC current probe
P5200A	50 MHz, 50X/500X high-voltage differential probe
P5202A <sup>2</sup>	100 MHz, 640 V High Voltage differential probe
P5205A <sup>2</sup>	100 MHz, 1.3 kV High Voltage differential probe
P5210A <sup>2</sup>	50 MHz, 5.6 kV High Voltage differential probe
P6015A	20 kV, 75 MHz high-voltage passive probe

## Recommended Accessories

ACD2000	Soft transit case for TBS2000B 2-channel instrument
ACD4000B	Soft transit case, for TBS2000B 4-channel instrument
TPA-BNC	TekVPI ® to TekProbe ® BNC adapter
TEK-DPG	TekVPI ® Deskew pulse generator signal source
067-1686-XX	Power measurement deskew and calibration fixture
TEK-USB-488	GPIB-to-USB adapter <sup>3</sup>
TEK-USB-WIFI	USB Wi-Fi <sup>4</sup> dongle for TBS2000B Series Oscilloscope only
RMB2020	Rackmount kit for TBS2072B, TBS2102B, TBS2202B
RMB2040	Rackmount kit for TBS2074B, TBS2104B, TBS2204B

## Instrument options

### Power plug options

Opt. A0	North America power plug (115 V, 60 Hz)
Opt. A1	Universal Euro power plug (220 V, 50 Hz)
Opt. A2	United Kingdom power plug (240 V, 50 Hz)
Opt. A3	Australia power plug (240 V, 50 Hz)
Opt. A4	North America power plug (240 V, 50 Hz)
Opt. A5	Switzerland power plug (220 V, 50 Hz)

<sup>2</sup> Requires the TekVPI adapter TPA-BNC.

<sup>3</sup> The TEK-USB-488 only works with default GPIB address 1.

<sup>4</sup> Certified to comply with CE, FCC and IC regulations. Available in Australia, Canada, China, EU Region, New Zealand, and United States. For other compatible Wi-Fi adapters, see Compatible USB-WIFI dongles under Input output ports specifications.



Opt. A6	Japan power plug (100 V, 50/60 Hz)
Opt. A10	China power plug (50 Hz)
Opt. A11	India power plug (50 Hz)
Opt. A12	Brazil power plug (60 Hz)
Opt. A99	No power cord

Opt E1	Universal EURO, United Kingdom, and Switzerland
--------	---

**Language options**

Opt. L0	English front panel overlay
Opt. L1	French front panel overlay
Opt. L2	Italian front panel overlay
Opt. L3	German front panel overlay
Opt. L4	Spanish front panel overlay
Opt. L5	Japanese front panel overlay
Opt. L7	Simplified Chinese front panel overlay
Opt. L8	Traditional Chinese front panel overlay
Opt. L9	Korean front panel overlay
Opt. L10	Russian front panel overlay
Opt. L99	No manual

Language options include translated front-panel overlay for the selected language(s).

**Service options**

Opt. C3	Calibration Service 3 years. Includes traceable calibration or functional verification applicable, for recommended calibrations. Coverage includes the initial calibration plus 2 years calibration coverage.
Opt. C5	Calibration Service 5 years. Includes traceable calibration or functional verification applicable, for recommended calibrations. Coverage includes the initial calibration plus 4 years calibration coverage.
Opt. D1	Calibration Data Report.
Opt. D3	Calibration Data Report 3 years (with Option C3).
Opt. D5	Calibration Data Report 5 years (with Option C5).
Opt. T3	Three Year Total Protection Plan, includes repair or replacement coverage from wear and tear, accidental damage, ESD or EOS plus preventative maintenance. Including a 5 day turnaround time and priority access to customer support.
Opt. T5	Five Year Total Protection Plan, includes repair or replacement coverage from wear and tear, accidental damage, ESD or EOS plus preventative maintenance. Including a 5 day turnaround time and priority access to customer support.

Probes and accessories are not covered by the oscilloscope warranty and Service Offerings. Refer to the datasheet of each probe and accessory model for its unique warranty and calibration terms.



Tektronix is registered to ISO 9001 and ISO 14001 by SRI Quality System Registrar.



Product(s) complies with IEEE Standard 488.1-1987, RS-232-C, and with Tektronix Standard Codes and Formats.



Av. de la Esperanza #916  
Col. La Hacienda  
Apodaca, N.L.,  
66636  
Movil : (81)10747680  
WhatsApp: (55)70078307  
Email: ventas@scminstrumentos.com  
http://www.scminstrumentos.com



ASEAN / Australasia (65) 6356 3900  
Belgium 00800 2255 4835\*  
Central East Europe and the Baltics +41 52 675 3777  
Finland +41 52 675 3777  
Hong Kong 400 820 5835  
Japan 81 (120) 441 046  
Middle East, Asia, and North Africa +41 52 675 3777  
People's Republic of China 400 820 5835  
Republic of Korea +822 6917 5084, 822 6917 5080  
Spain 00800 2255 4835\*  
Taiwan 886 (2) 2656 6688

Austria 00800 2255 4835\*  
Brazil +55 (11) 3759 7627  
Central Europe & Greece +41 52 675 3777  
France 00800 2255 4835\*  
India 000 800 650 1835  
Luxembourg +41 52 675 3777  
The Netherlands 00800 2255 4835\*  
Poland +41 52 675 3777  
Russia & CIS +7 (495) 6647564  
Sweden 00800 2255 4835\*  
United Kingdom & Ireland 00800 2255 4835\*

Balkans, Israel, South Africa and other ISE Countries +41 52 675 3777  
Canada 1 800 833 9200  
Denmark +45 80 88 1401  
Germany 00800 2255 4835\*  
Italy 00800 2255 4835\*  
Mexico, Central/South America & Caribbean 52 (55) 56 04 50 90  
Norway 800 16098  
Portugal 80 08 12370  
South Africa +41 52 675 3777  
Switzerland 00800 2255 4835\*  
USA 1 800 833 9200

\* European toll-free number. If not accessible, call: +41 52 675 3777

For Further Information. Tektronix maintains a comprehensive, constantly expanding collection of application notes, technical briefs and other resources to help engineers working on the cutting edge of technology. Please visit [www.tek.com](http://www.tek.com).

Copyright © Tektronix, Inc. All rights reserved. Tektronix products are covered by U.S. and foreign patents, issued and pending. Information in this publication supersedes that in all previously published material. Specification and price change privileges reserved. TEKTRONIX and TEK are registered trademarks of Tektronix, Inc. All other trade names referenced are the service marks, trademarks, or registered trademarks of their respective companies.